

Table of Contents

Nameplate Information

Each Model 100 pump is equipped with a nameplate listing the pump type designation. See example below for explanation.

EXAMPLE — MODEL 100 6A 100 A 9406A2

100

Basic model

6

Number of high pressure fuel outlets

A

Size of pump

100

Diameter of plunger in tenths of millimeters (100 = 10.0 mm diameter)

A

Execution of pump (denotes a major change)

9406

Variation specification from a basic pump. It is also the identification number.

A

Specification edition (denotes a minor change)

2

Specification code (usually denotes calibration change)

- INTRODUCTION
- Explanation of Pump Type Designation
- SECTION I — Hydraulic Head and Related Components**
- Introduction
- A. Hydraulic Head Removal
- B. Disassembly
- 1. Removal and Disassembly of Overflow Valve
- C. Component Inspection
- D. Reassembly
- E. Installation
- SECTION II — Governor Assembly**
- Introduction
- A. Governor Removal
- B. Disassembly
- C. Governor Subassemblies
- 1. Fulcrum Lever Assembly
- 2. Friction Clutch Assembly
- 3. Resilient Drive Governor Weight and Shaft assembly
- 4. Excess Fuel Device
- 5. Excess Fuel Device with Puff Limiter Feature
- 6. Puff Limiter Cover Assembly with Aneroid Diaphragm
- D. Governor Component Inspection
- E. Reassembly
- F. Installation
- SECTION III — Intravance® Timing Device**
- Introduction
- A. Intravance Timing Device Removal
- B. Disassembly
- C. Component Inspection
- D. Reassembly
- E. Installation
- SECTION IV — Supply Pump and Hand Primer Assembly**
- Introduction
- A. Supply Pump and Hand Primer Removal
- B. Disassembly
- C. Component Inspection and Testing
- D. Reassembly
- E. Installation
- SECTION V — Shut-Off Devices**
- A. Bowden Wire Shut-Off
- Description and Operation
- 1. Removal and Disassembly
- 2. Inspection
- 3. Reassembly
- 4. Installation
- B. Electric Shut-Off
- Description and Operation
- 1. Removal and Disassembly
- 2. Inspection
- 3. Solenoid Functional and Electrical Tests
- 4. Reassembly and Installation
- 5. Solenoid Operational Check
- C. Low Idle Screw Capsule (Single Lever Control)
- Description and Operation
- 1. Removal and Disassembly
- 2. Inspection
- 3. Reassembly and Installation
- 4. Adjustment
- SECTION VI — Internal Timing and Testing**
- A. Checking and Setting Lift-to-Port Closing
- B. Setting Delivery Valve Opening Pressure
- C. Pressure Testing for Fuel Leaks
- D. Timing Advance Check for Intravance Timing Device
- SECTION VII — Calibration**
- A. Mounting on Test Stand
- B. Differential Pump Calibration
- SECTION VIII — External Sealwiring**
- SECTION IX — Tolerances**
- A. Dimensional Tolerances
- B. Operational Tolerances
- SECTION X — Trouble-Shooting Guide**